



3.

P PROGRAMS

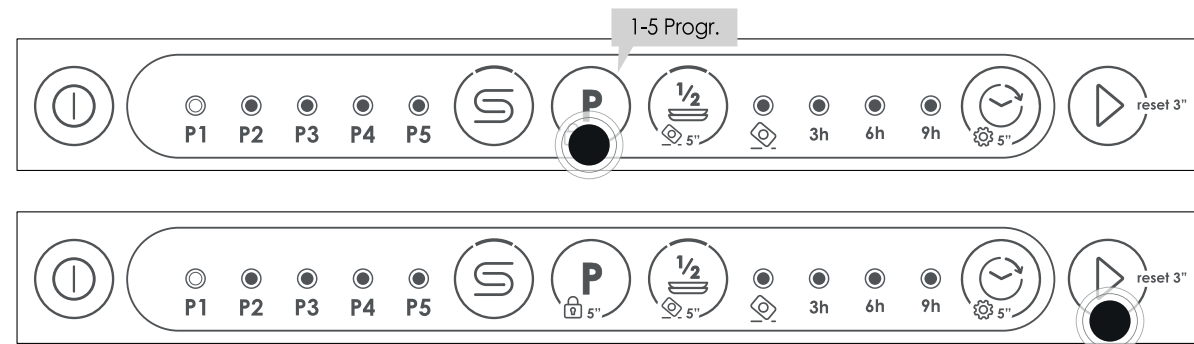


SETTINGS

1/2 HALF LOAD*

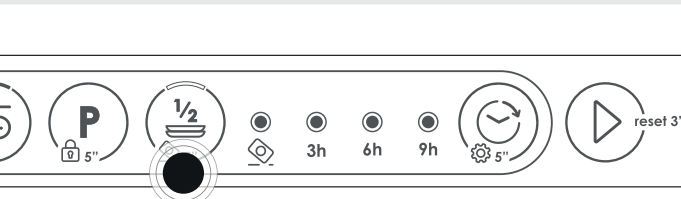


TABLETS*

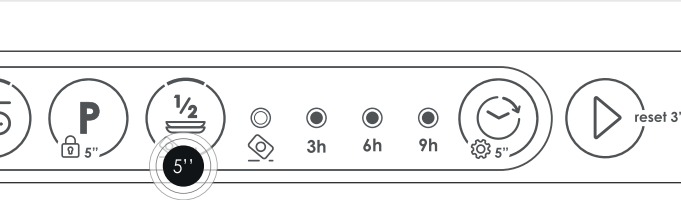


* If the option is not compatible with cycle, the LED will blink for 3 times.

DELAY START

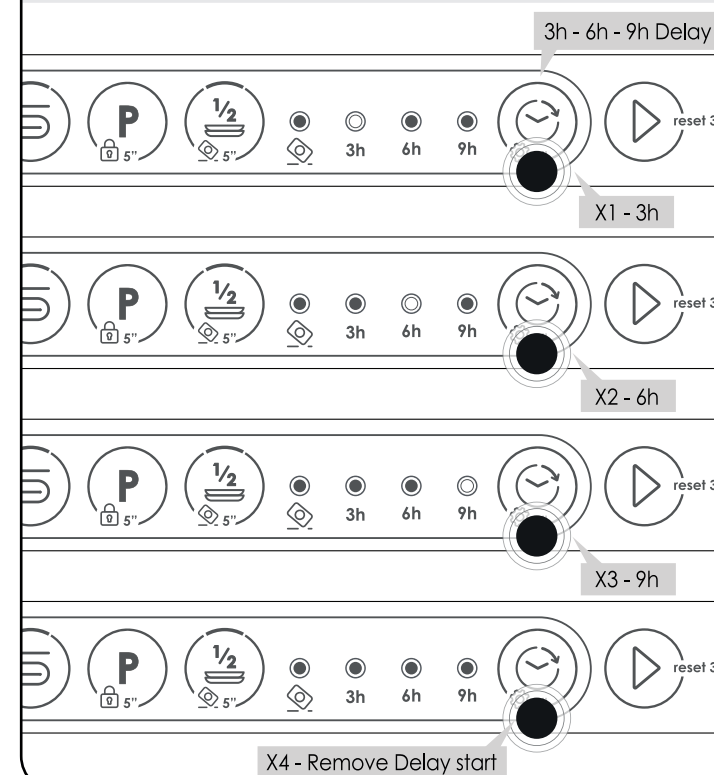

	🔥	🕒	1/2	🔒	
P1	49°	60°	49'	-	YES
P2	🍴	60°	131'	YES	YES
P3	🌿	45°	233'-236'	YES	YES
P4	🍵	75°	135'	-	YES
P5	🧼	-	10'	-	-

4.

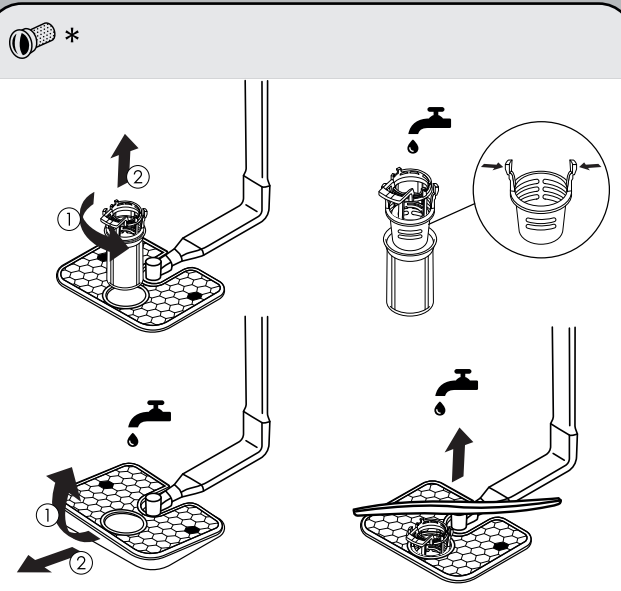


5.


SETUP MENÙ 1/2



5.1 ENTER SETUP MENÙ

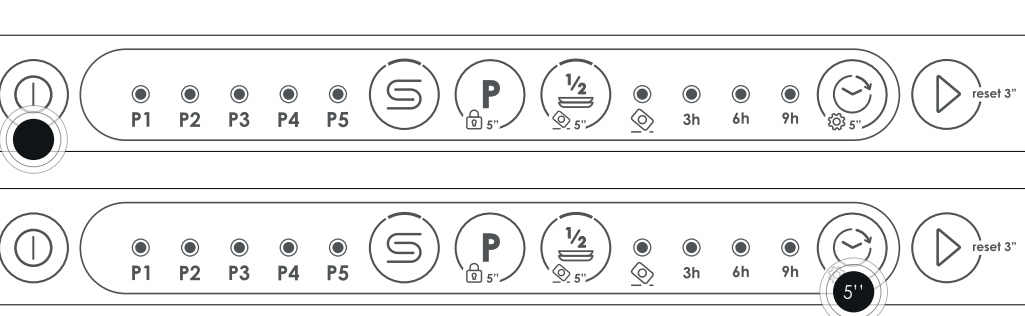

5.2 SOFTENER

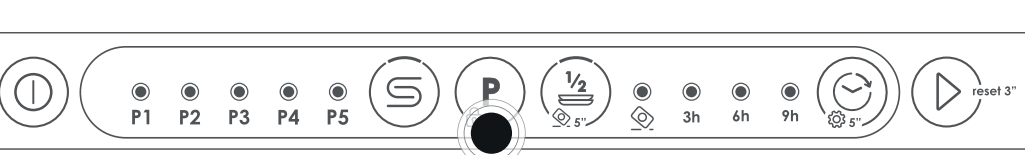

Prog.	1-5 Level
S0	NO LED
S1	P1
S2	P1+P2
S3	P1+P2+P3 DAFUALT
S4	P1+P2+P3+P4
S5	P1+P2+P3+P4+P5


L	°FH	°dH	
0	0-6	0-3	S0
1	7-11	4-6	S1
2	21-29	12-16	S2
3* DEFAULT	30-39	17-22	*S3
4	49-59	28-33	S4
5	60-89	34-50	S5

5.

SETUP MENÙ 2/2




5.3 BUZZER

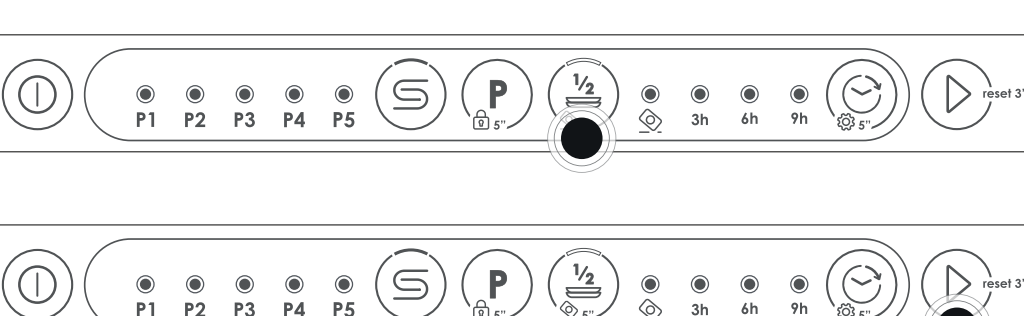

BUZZER ON (DEFAULT) = 1/2 + 🔊 BUZZER OFF = 1/2

5.4 MEMO MODE

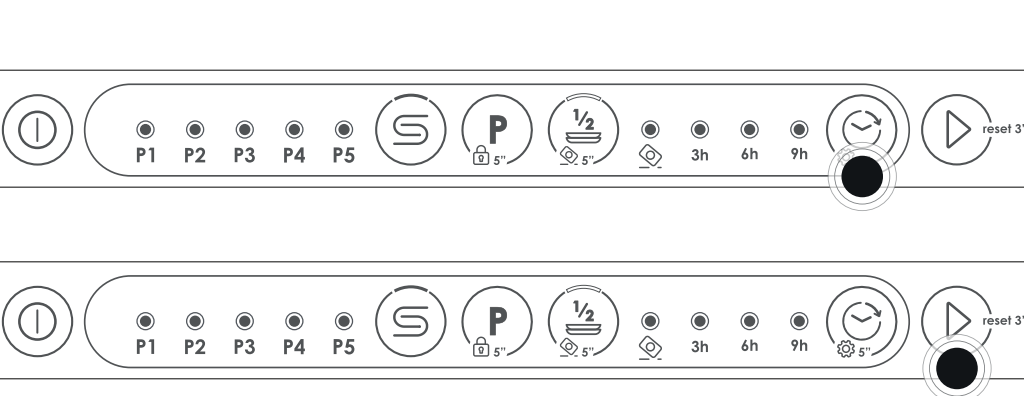

MEMO MODE ON = 6h MEMO MODE OFF (DEFAULT) = 6h



70013520



To download any other further information in your language, please go to:
go.he.services/candy-um

RAPIDÓ

1.



2.



3.







4.



5.



1.

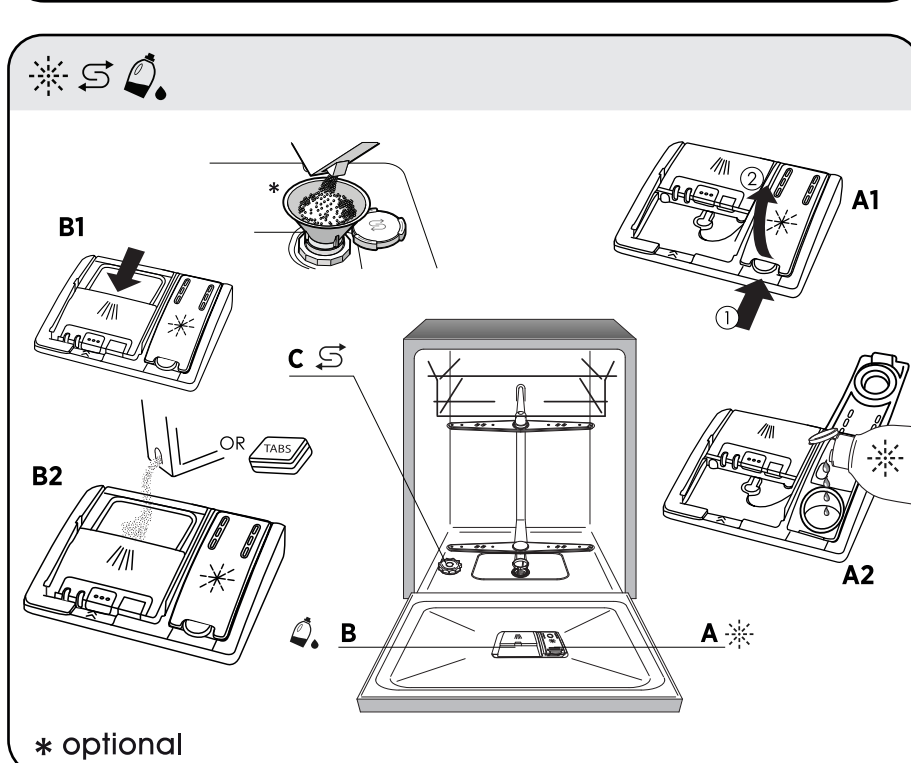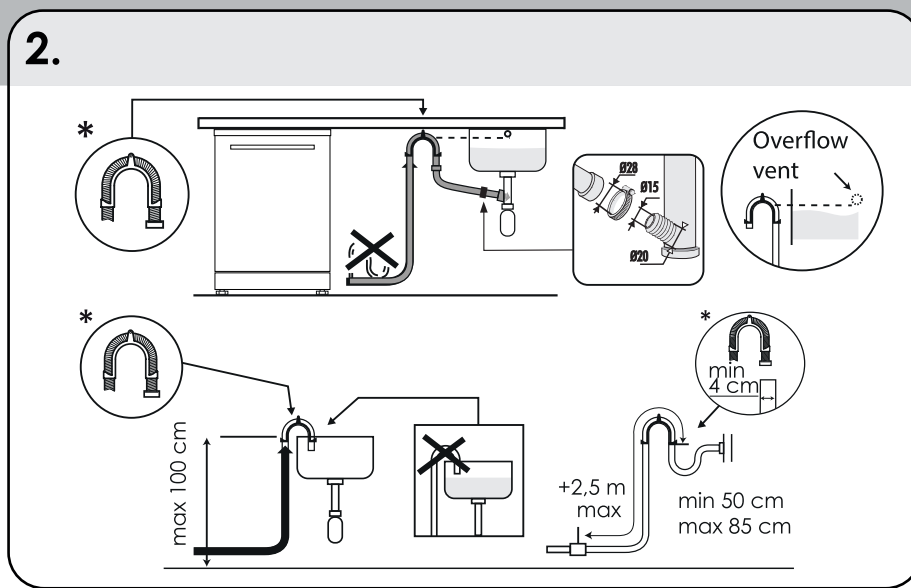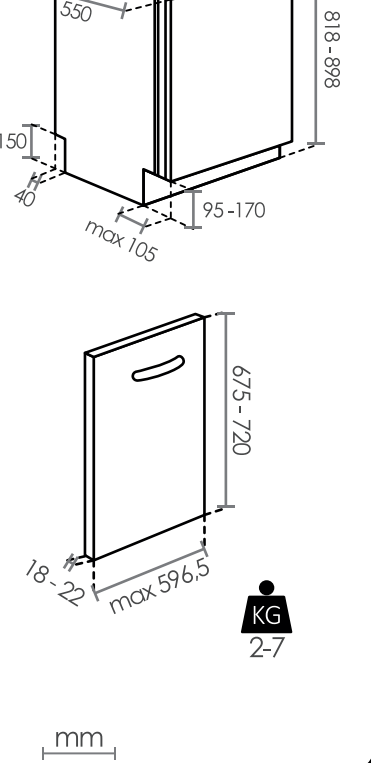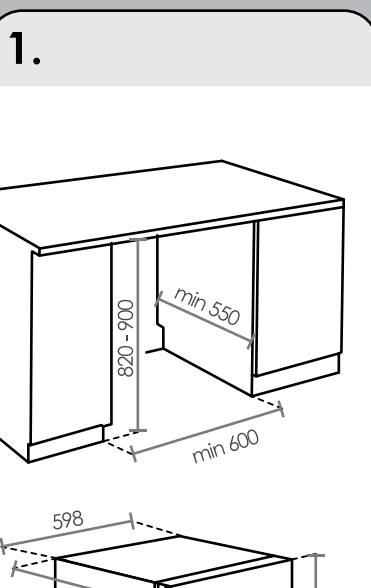

2.

